

BASIC WINDOW TRIM & PLANK DETAILS


TECHNICAL BULLETIN

INSTALLATION OPTION 1

Using TWO-PIECE J-Trims

The following instructions demonstrate proper installation for window and door trim, using a typical design layout.

When installing trim around a door, follow instructions for jambs and head details only.

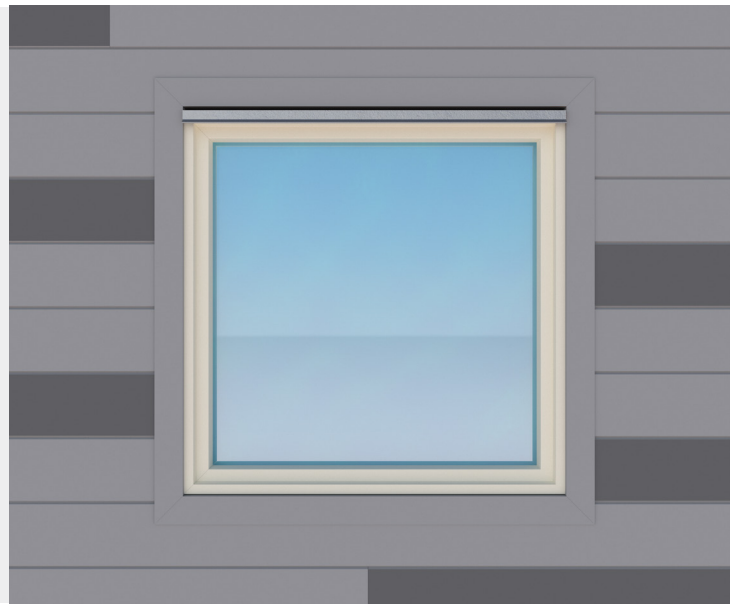

- 1 Ensure flashing & air/water barrier are completed to meet local building code (Figure 1).



Figure 1

- 2 Attach P11 back plates cut to 45° around the window. For the P11 sill and head of window, add P30 plank backer 2" from ends and 16" center (Figure 2).

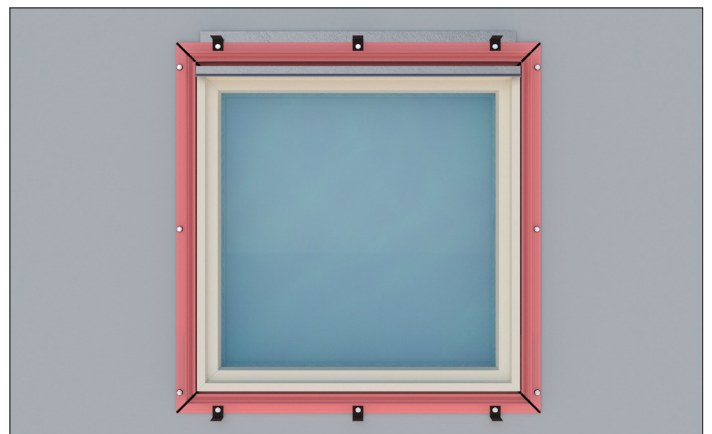


Figure 2

- 3 Notch P46V or P44V plank to go around the sill of window (Figure 3.1), ensuring a 1/8" gap is between the horizontal notched plank and horizontal P11 back plate (Figure 3.2).

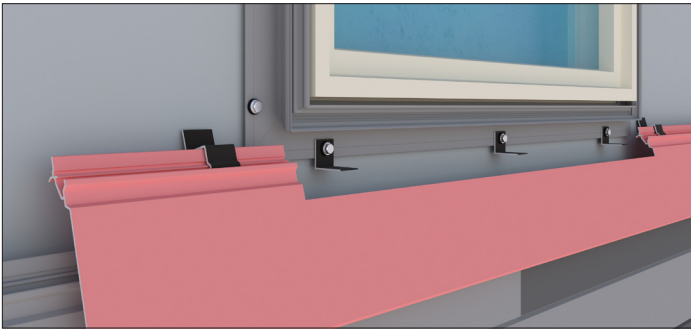


Figure 3.1

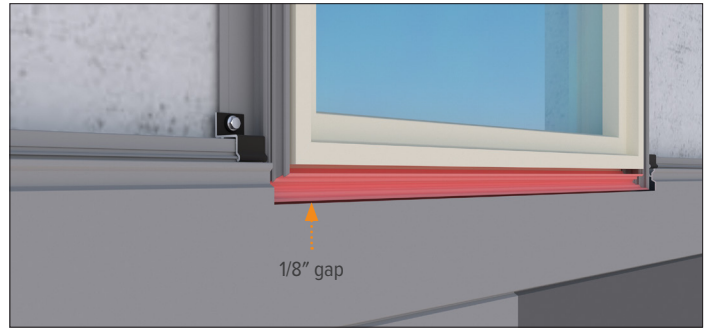


Figure 3.2

- 4 Install planks on either side of the jamb of the window, at head of window (Figure 4.1). Notch plank leaving 1/8" gap between the plank and the horizontal P11 back plate (Figure 4.2).



Figure 4.1

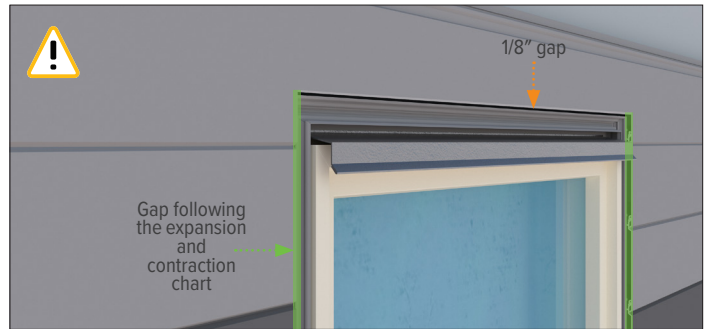


Figure 4.2



IMPORTANT

Make sure gap between the plank and vertical P11 back plate is following the expansion and contraction chart found on pg. 11 of the Installation Guide (Figure 4.2).

- 5 Snap FastPlank® P25 Corner Key into the receiving engagement of the mitered backplates (Figure 5.1).

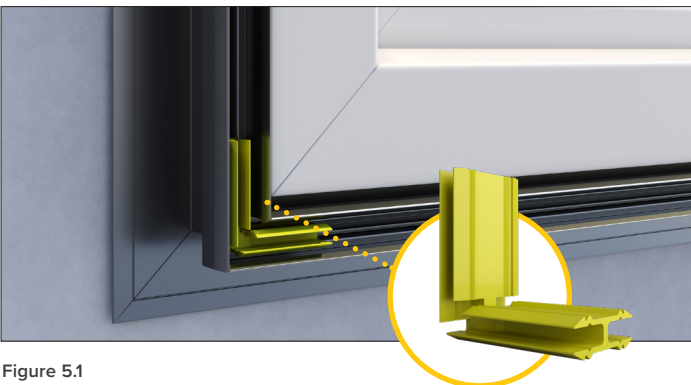


Figure 5.1

- 6 Measure and install P11 top caps cut to 45° around window (Figure 5.2).

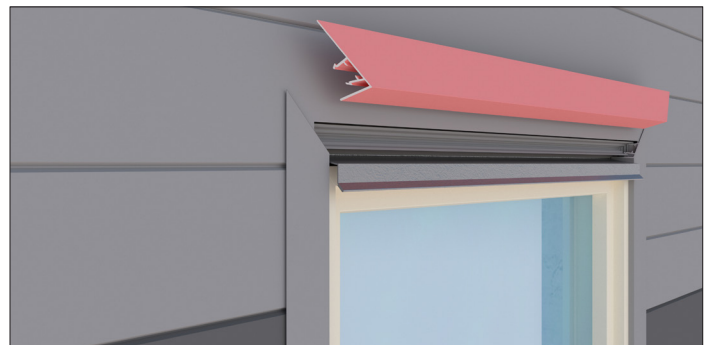


Figure 5.1



Contact us for **Free Estimates & Samples**

1-877-973-8746 | orderdesk@fastplank.com | fastplank.com

