


Basic Window Trim & Plank Install Process

INSTALLATION OPTION 1

Using TWO-PIECE J-Trims

The following instructions demonstrate proper installation for window and door trim, using a typical design layout.

When installing trim around a door, follow instructions for jambs and head details only.

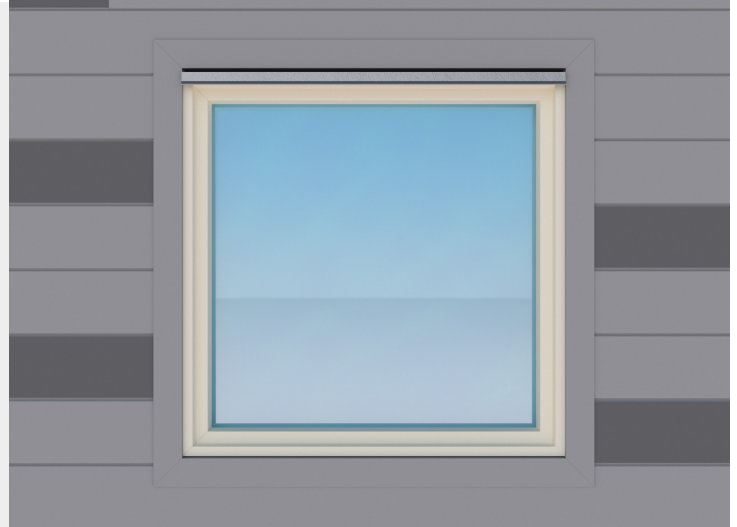

1. Ensure flashing & air/water barrier are completed to meet local building codes (Figure 1).



Figure 1

2. Attach **2-Piece J Trim** back plates cut to 45° around the window.
For the **2-Piece J Trim** sill and head of window, add plank backers 2" from ends and 16" center (Figure 2).

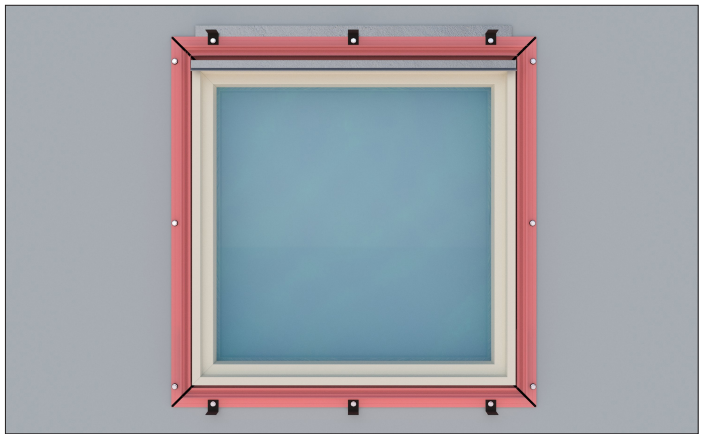


Figure 2

3. Snap FP Corner Key into the receiving engagement of the mitered backplates. (Figure 3)

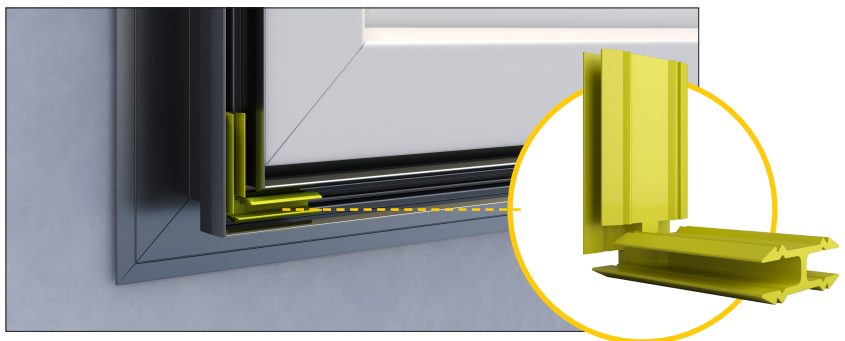


Figure 3

4. Notch your chosen plank to go around the sill of window (Figure 4.1), ensuring a 1/8" gap is between the horizontal notched plank and horizontal **2-Piece J Trim** back plate (Figure 4.2).



Figure 4.1

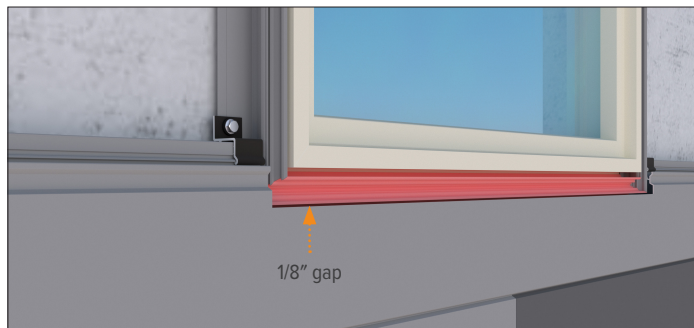


Figure 4.2

5. Install planks on either side of the jamb of the window, at head of window (Figure 5.1). Notch plank leaving 1/8" gap between the plank and the horizontal **2-Piece J Trim** back plate (Figure 5.2).



Figure 5.1

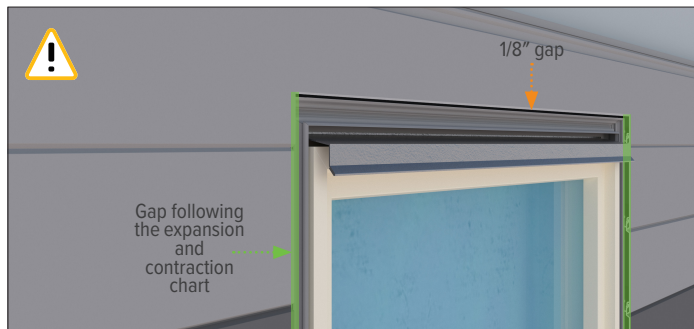


Figure 5.2

**IMPORTANT**

Make sure gap between the plank and vertical **2-Piece J Trim** back plate is following the expansion and contraction chart found on pg. 11 of the Installation Guide (Figure 5.2).

6. Measure and install **2-Piece J Trim** top caps cut to 45° around window (Figure 6.1 and 6.2).

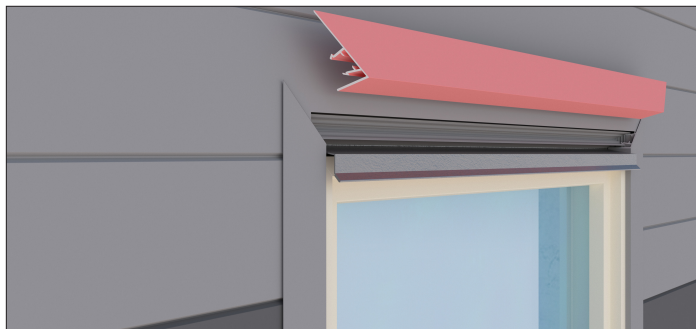


Figure 6.1



Figure 6.2



Contact us for **Free Estimates & Samples**

1-877-973-8746 | orderdesk@fastplank.com | fastplank.com