

Specifically designed for around windows, the new FastPlank® FP Corner Key can be used to stabilize top caps for flawless mitered corners.

- 1 Fasten down mitered 2-Piece J Trim backplates as per standard window trim installation process (Figure 1).

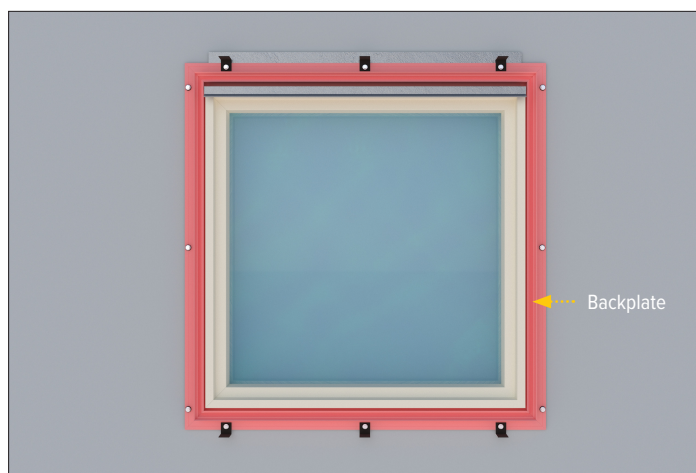


Figure 1

- 2 Prior to installing 2-Piece J Trim top caps, snap the FP Corner Key into the receiving engagement of the mitered backplates (Figure 2).

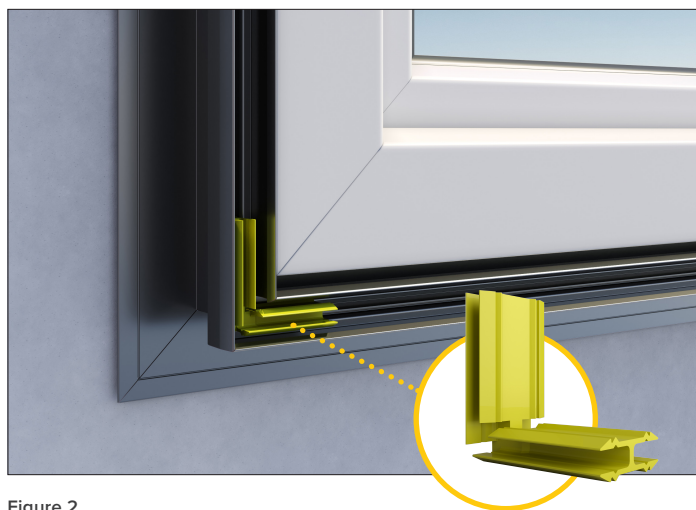


Figure 2

- 3 Once in place, snap top caps into backplates as usual (Figure 3).

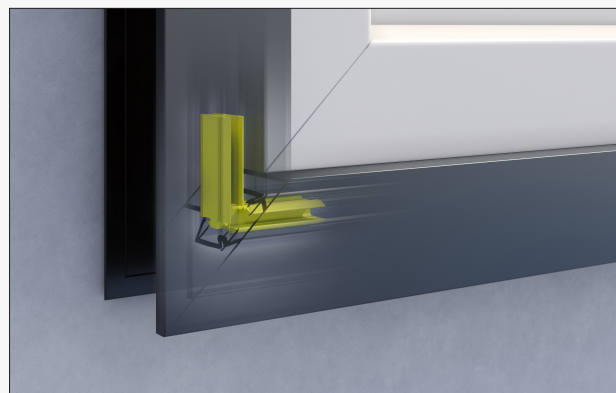


Figure 3



IMPORTANT

This insert will inhibit movement of FastPlank® top caps, and prevent the exposure of bare aluminum, ensuring a sleek & aesthetically pleasing exterior.



1-877-973-8746
orderdesk@fastplank.com
engagebp.com/fastplank