


PLANK BACKER SPACING REQUIREMENT

For all applicable FastPlank® Systems

SPACING REQUIREMENT

Plank Backers are installed along both the starter J-trim and the termination J-trim, spaced 10" O.C. apart along the length of the J-trim. This spacing is the same whether planks are run horizontally or vertically. Consistent spacing maintains a flat, uniform appearance and preserves the performance of the concealed fastening system.

Fasten each J Trim through the Plank Backer on the designated fastener line, following the fastener guidance in the applicable installation guide.

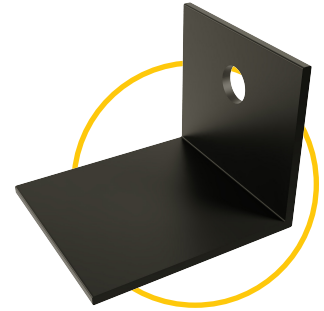

Horizontal Plank Installation



Vertical Plank Installation



INSTALLATION SUPPORT

Our installation support team is available to provide additional guidance, contact us at 1-877-973-8746 to connect with our dedicated installation support team.



IMPORTANT NOTICE

Correct Plank Backer spacing along both J-trims is required to maintain a flat, uniform finish and to keep the product warranty in effect. Spacing that exceeds 10" O.C. may void the product warranty.